

# Fantasia M


Creating fantasy in your cup!

User Manual



Before operating this unit, please read these instructions completely and save them

## Introduction

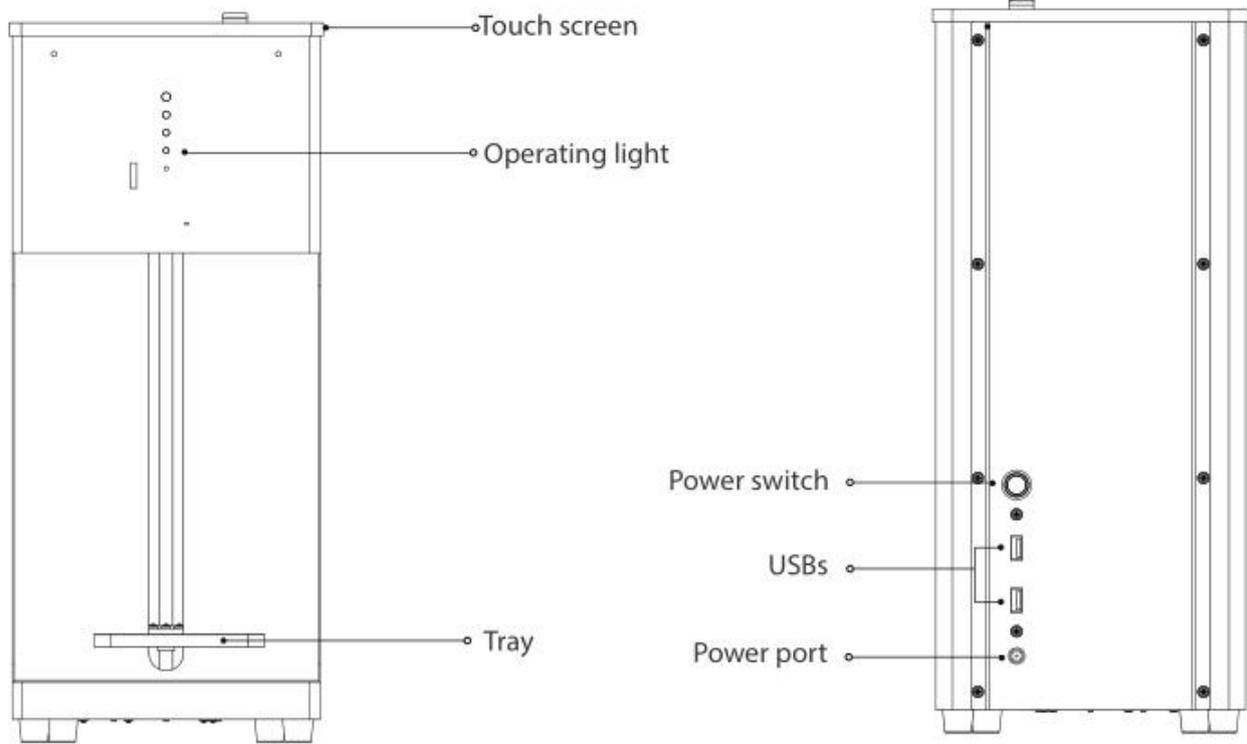

FRONT

BACK

## Preparation

- Please complete the following steps before turn it on

① Please take out the protecting foam from position A

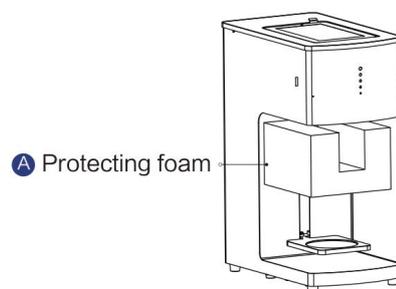



figure 1

② Attention: Please stuff back the protecting foam before

transit (As shown in figure 1)

- Please connect to the electricity (As shown in figure 2)

- Please install FancyBox

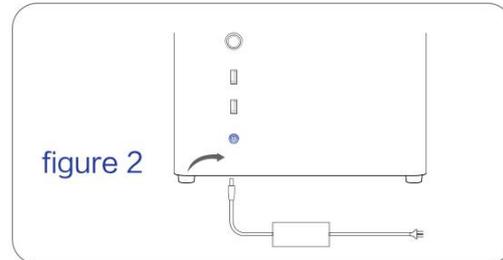

- Connect WiFi

- Obtain the unique machine URL and QR code under

### Settings Interface

Note: Customer can upload image through this URL or QR code

### Restrictions in use

Do not use under the below situations, to avoid electric shocks, fire or other damage

1. Easy to bump and other unstable place
2. High temperature and heavy wet place, such as bathroom

## Warranty

### Warranty terms

1. Evebot will offer a free firmware upgrade service for lifetime
2. Manufacturing defects in materials and workmanship of the product, please contact dealer for repair or replacement
3. Evebot will provide a 12 month warranty, during the warranty

period, if any accessory defect is inspected and confirmed by dealer, a free replacement service shall be provided.

4. The Limited Warranty starts from the day the customer receives the product.

### **No-warranty terms**

1. Expired warranty
2. Damages caused by force majeure
3. Violations against warranty, including but not limited to customer induced damage, such as self-repairs, exposure to water, damage caused by misuse, alteration, failure to comply with product manual, and so on.

### **Usage**


- Upload image simply by scanning QR code or input URL
- Select the image and adjust the cup size, image brightness and contrast
- Create high resolution image or text in seconds onto your favorite frothy beverages, both hot and cold

## Maintenance


### 1. Replace FancyBox

Each FancyBox can prints about 800 cups ,you can resume buying through local dealers or our ofcal website:

[www.icoffee-tea.com](http://www.icoffee-tea.com)

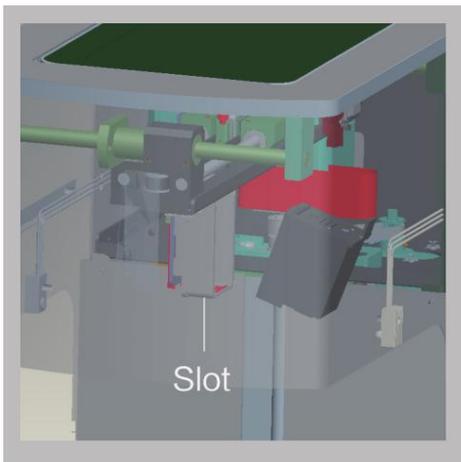

Undraw the lock catch and remove the FancyBox

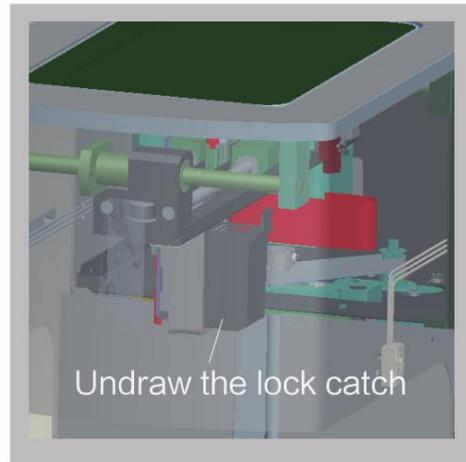

Put the new FancyBox in the slot

### 2. Daily Clean

This machine does not need complex maintenance, simply wipe clean the tray and surface with a soft damp cloth at the end of each day

### Product parameters

Product model	EB-FM1	Electric parameters	AC 110V ~240V 50/60Hz
Outline size	33cm x19cm x 44cm	Cup height	5cm ~ 24cm
Net Weight	8.6kg	Cup diameter	4cm ~10cm
Network parameters: WiFi	802.11b/g/n	Operating power	60W

## Special instructions

### Transportation

1. To avoid damage during transportation, make sure the machine is completely turned of and the protecting foam is correctly installed.

### In use


1. At emergence of an unusual sound, collision , please switch of the device at once
2. If printing pattern failed ,please stop running and take the FancyBox out, wiping the spray-head gently with a tissue, until appear the color
3. Please put the cup in the center of tray, to make the pattern at the cup center
4. Do not use hands or other objects to touch the moving parts, to avoid be involved in when printing

### Setting

1. It can not print if the FancyBox do not install correctly
2. Please ensure to place the appliance on a hard, fat level surface

## Power Supply

1. Don't twist, don't bend the power cord, differently farewell the cable can remain bared or absolutely break
2. When disconnect the power cord , grasp and pull the connector, not the cord.
3. Please do not connect the cable to the improper socket or other devices
4. Forbid non-specialized person to open the rear cover for maintenance
5. If the power cord becomes lost, damaged , please contact your dealer for a suitable replacement
6. Please disconnect power supply when clean the device

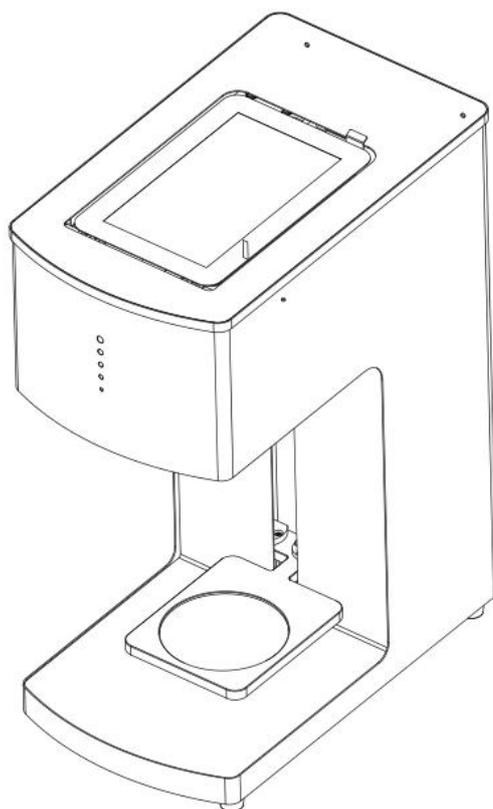

Macas  
凯斯